 


# G05 USER MANUAL

## Unit overview

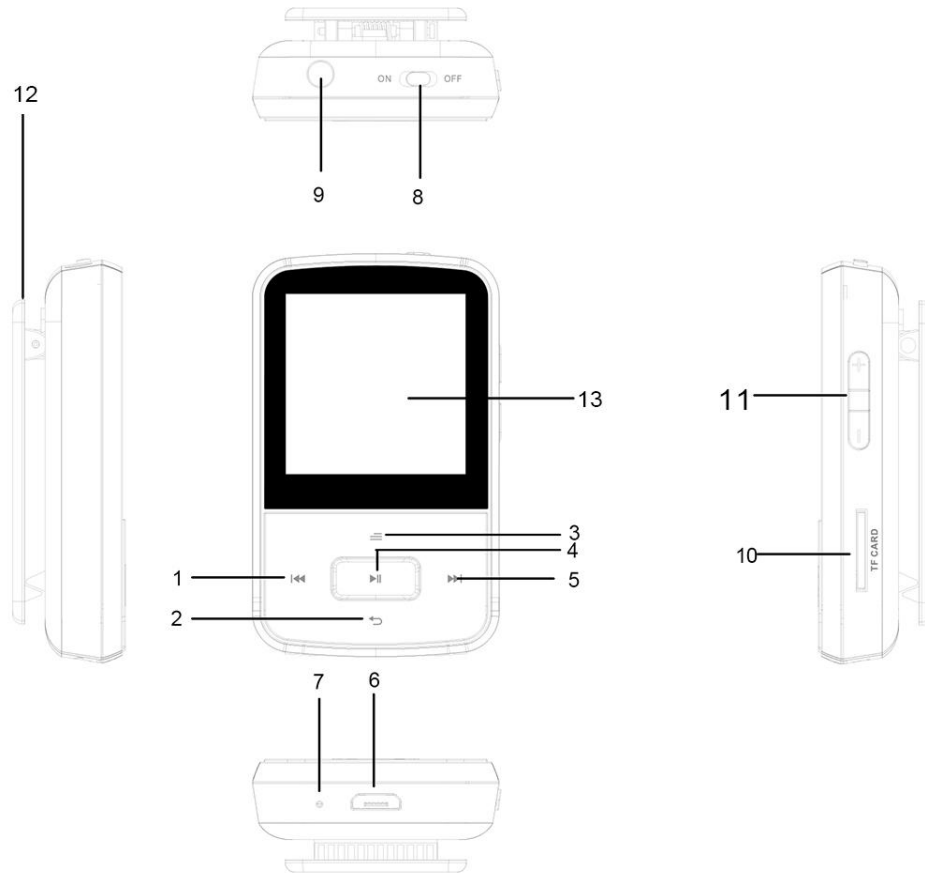

1. Previous and fast forward playing / back to superior sub-menu
2. Exit to superior menu / scroll down
3. Sub-menu button / Lock/Unlock / scroll up
4. Play / Pause / Enter / On-off
5. Next and fast backward playing / Enter
6. Micro-USB port
7. Mic phone hole
8. Power on-off
9. Earphone jack
10. Micro SD card slot
11. Vol+/Vol-
12. Clip
13. 1.5" TFT screen

## Technical Specification

### Packaging contents



- .The player
- .Earphone
- .Micro-USB cable
- .Silicon Cover
- .User manual

### Specification

Screen	1.5 inch 128*128 TFT display
Flash memory	8GB
Audio format	MP3/WMA/OGG/APE/FLAC/WAV/AAC-LC/ACELP
Recording format	FM/MIC record and WAV
Battery	Li-polymer rechargeable 300mAh
FM frequency	87.5-108MHZ
Micro-SD card	Extend to 32GB
Photo format	JPG,BMP and GIF
Charging time	3 hours

## Basic Operation

### Powering on the player

- Push on-off button to the “on” side or Long Press  button and hold (about 3 seconds) to turn it on..
- Push on-off button to the “off” side or Long Press  button and hold (about 3 seconds) to turn it off.

### Lock keys

- Long press  and loose when appear lock icon. And key pad is locked and not working.

### Unlock keys

- Long press  and loose when appear unlock icon. And key pad work normally

### Battery Charging

When the battery indicator on the screen , you must charge the device.

The device has two charge options:

- a) You can charge the device via the USB connector.
- b) You can also charge the device via a USB wall adapter (not supplied)

**Note:** The charging time should not exceed 4 hours. It is recommended to turn off the device before charging.

## Press buttons definition

Action	Basic operation
Short press	Press time is less than 1-2 seconds
Long press	Press time is more than 1-2 seconds
Hold	Keep pressing one button

**Note:** Without special instruction, all pressing mean short pressing in this user manual

## MUSIC

At any interface, long press ↵ to enter main menu interface and find music UI



### Play your music

On music menu, press ▶ to enter music function, and by pressing ≡/ ↵ view sub-menu from up to down: “All songs”, “Artists”, “Albums”, “Genres”, “Playlists” and “Create playlists”. Press ▶ to confirm your option and start to play your music.

When the device is playing songs, press ≡ button to enter below sub-menus, and press ▶ to enter the option you want.

- Repeat

Here appears 3 options, Repeat off, Repeat 1, and Repeat All.

- Shuffle

Choose On or off mode as you want.

- Equalizer

Here are 7 equalizers for your option, Off, Rock, Funk, Hip Hop, Jazz, Classical, Techno.

- Add to playlist

There are 3 options prepared for you, including “Playlist on the go [1]”, “Playlist on the go [2]” and “Playlist on the go [3]”, you can add the song which is playing to any one of these three as you like.

- Remove from playlist

You can remove the song which is playing to any one of these three Playlist as you like.

- Repeat settings

When playing time is reach sleep timer you set, the player will power off automatically

- **Bookmarks**

It is marked by the stopping time as “hh:mm:ss”.So you can set the stopping time before you add it for continues playing next time conveniently.

Maximum number of bookmarks supported by each audio file is 10. You can also cover the previous bookmark with new bookmark, and then the old one will be replaced by the new.

You can find the bookmarks you saved with the option “Go to bookmark” under item “Bookmarks”, and you can delete them with the option “Delete bookmark”.

- **Delete**

It will show” ...(song name)” delete? Press ► to choose yes to delete this song.

### **To create playlists by yourself**

There is a free program called Media Go. It's the easiest program to use for transferring playlists to the AGPTek. . Just create your playlists in Media Go and then right-click its name and select 'Add playlist to X :( Which is your MP3 player's disk) '. (You can download it at <http://mediago.sony.com/chs/download>).

## **SETTING**

At any interface, long press ↶ to enter main menu and find setting UI



On setting menu and press ► to access the following settings: “play mode”, “sound settings”, “Sleep timer”, ”Power off”, ”Backlight timer”, ”Clock style”, “Date and time”, “Language”, “Information”, “Format device”, “Factory settings”.

Press ► to default your favorite setting.

- When playing time is reach sleep timer you set, the player will power off automatically
- Repeat and Suffle modes for your option
- Choose the language according to your need
- See information about your player under “Information”
- Set the backlight time of your player
- Format the device or restore to factory setting

## RECORD

At any interface, long press ↩ to enter main menu and find record UI.



On record menu and press ▶|| to enter voice recording. The following lists will show: Start Voice Recording, Recordings library, Storage, Recording Format and Record Settings. Press ≡/ ↩ to navigate these lists.

- Quick Record:scroll to “Start Voice Recording” ,press ▶|| to start your recording, and long press ↩ to quickly save recording content.
- In recording library view recording files and delete all files.
- Tap ▶|| to pause or stop recording,
- To play, go to “Recordings Library” and play as music

## FM RADIO

At any interface, long press ↩ to enter main menu and find radio UI



On radio menu press ▶|| to enter below radio playing interface.



You can press ⏪/⏩ to search programs manually.

At radio playing interface, press ≡ and will show a related lists including “Save to preset”, “Clear preset”, “Auto tune”, “Start FM recording” and “Tuner Region”.

- Save to preset

The frequency points of radio station are displayed with 30 frequency points reserved at most.

- Clear preset

Press ▶| to clear preset stations.

- Auto tune

Press ▶| to enter Auto tune mode, it will show “Do you want to auto-tune”, press ▶| to confirm Yes or No. If choose Yes, it will be searching automatically and automatically save searched station in “Station list”.

- FM recording

When listening to the broadcast station program, press ≡ button to find the sub-menu “start FM radio recording”, and press ▶| to start recording, and long press ↶ to quickly saved recording content in the formats of FM REC001/002.....WAV

You will find saved FM recording in Record folder under FOLDER menu.

- Tuner region

The player is defaulted to command band, if you are in Japan, you need to change to Japan Band. If you are in Europe, you need to set to European band.

## FOLDER

At any interface, long press ↶ to enter main menu and find folder UI



On folder view menu press ▶| to enter folder menu. Here you can check files you have stored on the device including music, recording and pictures.

When you play music under “Folder”, it will shuffle songs by folder if you turn shuffle on.

If you have any question on this player, please contact with [Leo@agptek.com](mailto:Leo@agptek.com).