


# G05W USER MANUAL

## Unit overview

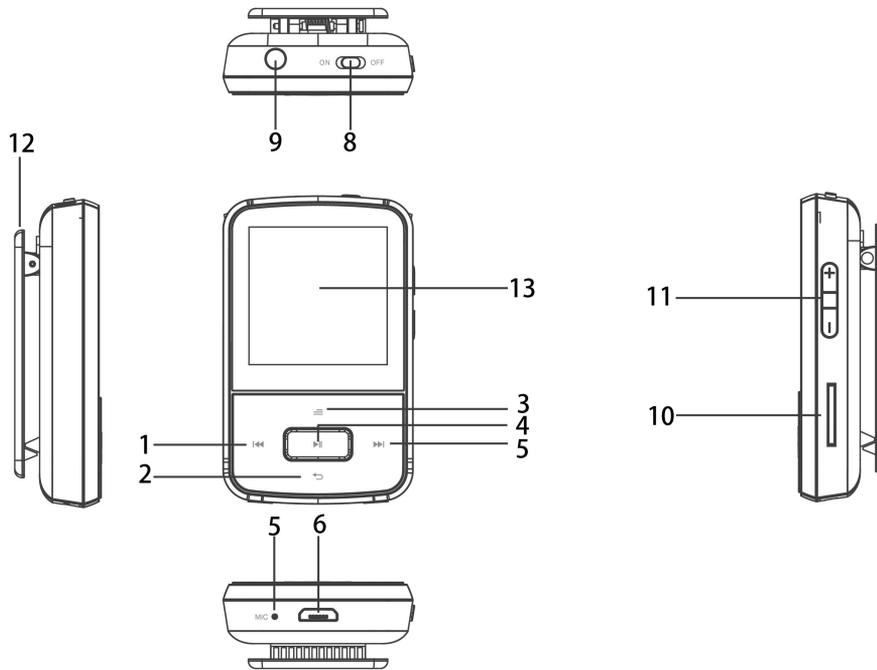

1. Previous and fast forward playing / back to superior sub-menu
2. Exit to superior menu / scroll down
3. Sub-menu button / Lock/Unlock / scroll up
4. Play / Pause / Enter / On-off
5. Next and fast backward playing / Enter
6. Micro-USB port
7. Mic phone hole
8. Power on-off
9. Earphone jack
10. Micro SD card slot
11. Vol+/Vol-
12. Clip
13. 1.5" TFT screen

# Technical Specification

## Packaging contents

- .The player
- .Earphone
- .Micro-USB cable
- .Silicon Cover
- .User manual

## Specification

|                  |   |
|------------------|---|
| Screen           | 1.5 inch 128*128 TFT display              |
| Flash memory     | 8GB                                       |
| Audio format     | MP3/WMA/OGG/APE/FLAC/WAV/<br>AAC-LC/ACELP |
| Recording format | FM/MIC record and WAV                     |
| Battery          | Li-polymer rechargeable 300mAh            |
| FM frequency     | 87.5-108MHZ                               |
| Micro-SD card    | Extend to 64GB                            |
| Photo format     | JPG,BMP and GIF                           |
| Charging time    | 3 hours                                   |

# Basic Operation

## Powering on the player

- Push on-off button to the “on” side or Long Press  button and hold (about 3 seconds) to turn it on..
- Push on-off button to the “off” side or Long Press  button and hold (about 3 seconds) to turn it off.

## Return operation

- At any interface, long press  to enter Main menu.
- At main menu, press  back to the interface you

just use(music or FM).

## Lock keys

- Long press  $\equiv$  and loose when appear lock icon. And key pad is locked and not working.

## Unlock keys

- Long press  $\equiv$  and loose when appear unlock icon. And key pad work normally

## Battery Charging

When the battery indicator on the screen , you must charge the device.

The device has two charge options:

- a) You can charge the device via the USB connector.
- b) You can also charge the device via a USB wall adapter(not supplied)

**Note:** The charging time should not exceed 4 hours. It is recommended to turn off the device before charging.

## Press buttons definition

| Action      | Basic operation                     |
|-------------|-------------------------------------|
| Short press | Press time is less than 1-2 seconds |
| Long press  | Press time is more than 1-2 seconds |
| Hold        | Keep pressing one button            |

**Note:** Without special instruction, all pressing mean short pressing in this user manual


## MUSIC

At any interface, long press  $\leftarrow$  to enter main menu interface and find music UI

### Play your music

On music menu, press  $\blacktriangleright$  to enter music function ,and

by pressing  $\equiv$  /  $\leftarrow$  view sub-menu from up to down: “All songs”, “Artists”, “Albums”, “Genres”, “Playlists” and “Create playlists”. Press  $\blacktriangleright$  to confirm your option and start to play your music.

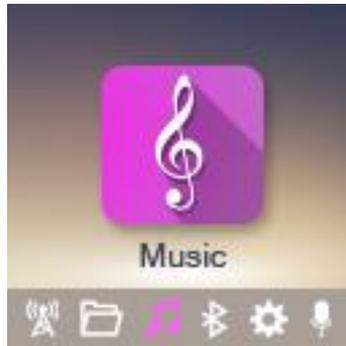

When the device is playing songs, press  $\equiv$  button to enter below sub-menus, and press  $\blacktriangleright$  to enter the option you want.

- Repeat

Here appears 3 options, Repeat 1, and Repeat All, Repeat off.

- Shuffle

Choose On or Off mode as you want.

- Equalizer

Here are 7 equalizers for your option, Off, Rock, Funk, Hip Hop, Jazz, Classical, Techno.

- Add to playlist

There are 3 options prepared for you, including “Playlist on the go [1]”, “Playlist on the go [2]” and “Playlist on the go [3]”, you can add the song which is playing to any one of these three as you like.

- Remove from playlist

You can remove the song which is playing to any one of these three Playlist as you like.

- Repeat settings

When playing time is reach sleep timer you set, the

player will power off automatically

- **Bookmarks**

It is marked by the stopping time as “hh:mm:ss”. So you can set the stopping time before you add it for continues playing next time conveniently.

Maximum number of bookmarks supported by each audio file is 10. You can also cover the previous bookmark with new bookmark, and then the old one will be replaced by the new.

You can find the bookmarks you saved with the option “Go to bookmark” under item “Bookmarks”, and you can delete them with the option “Delete bookmark”.

- **Delete**

It will show “...(song name)” delete? Press ► to choose yes to delete this song.

## **To create playlists by yourself**


There is a free program called Media Go. It's the easiest program to use for transferring playlists to the AGPTek. . Just create your playlists in Media Go and then right-click its name and select 'Add playlist to X :( Which is your MP3 player's disk) '. (You can download it at <http://mediago.sony.com/chs/download>).

## **SETTING**

At any interface, long press ↵ to enter main menu and find setting UI.

On setting menu and press ► to access the following settings: “play mode”, “sound settings”, “Sleep timer”, “Power off”, “Backlight timer”, “Clock style”, “Date and time”, “Language”, “Information”, “Format device”, “Factory settings”.

Press ► to default your setting.

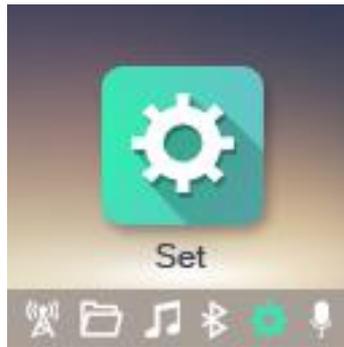

**Sleep timer:** When playing time is reach sleep timer you set, the player will power off automatically

**Power off :**Set the time to power off while the MP3 is not playing and you have no action on it. Also, you can select Off to let is still open.

**Backlight timer:** Set the backlight time of your player

**Clock style:** There are 4 kinds of clock style. You can press ◀ and ▶ to select it.

**Language :**Choose the language according to your need

**Information :**See information about your player under “Information”

## RECORD

At any interface, long press ↵ to enter main menu and find record UI.




On record menu and press ► to enter voice recording. The following lists will show: Start Voice Recording, Recordings library, Recording Format and Record Settings. Press ≡/↵ to select these lists.

- Quick Record: scroll to “Start Voice Recording”, press ► to start your recording, Tap ► to pause or stop recording, and press ↵ and choose YES to save recording content.

- In recording library view recording files (such as REC001.WAV, you can play it as music) and delete all files.

## FM RADIO

At any interface, long press ↵ to enter main menu and find radio UI.

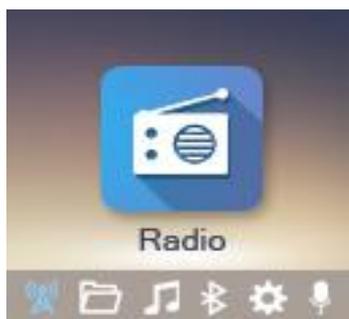

On radio menu press ► to enter below radio playing interface.

You can press ◀/▶ to search programs manually.

At radio playing interface, press ≡ and will show a related lists including “Presets”, “Save to preset”, “Clear preset”, “Auto tune”, “Start FM recording” and “Tuner Region”.

### ● Presets

You can see both preset station and auto tune station.

press ►, you can see clear preset and clear all presets.

Clear preset: Press ► to enter the station list and press ≡/↵ to select the station, and then press ► to ensure. It will show etc: "Clear preset01?" press ► to confirm Yes or No.

Clear all presets: Press ► It will show "Clear all presets" . Press ► to confirm Yes or No.

*Tip: if you use auto tune, all the station you had saved will be delete.*

- Save to preset

The frequency points of radio station are displayed with 30 frequency points reserved at most.

- Clear preset

Press ► to clear preset stations.

- Auto tune

Press ► to enter Auto tune mode, it will show "Do you want to auto- tune ", press ► to confirm Yes or No. If choose Yes, it will be searching automatically and automatically save searched station in "Station list".

- FM recording

Press ► to start recording, and press ↵ , it will show " Save recording?" press ► to confirm Yes or No. If choose Yes, it will saved recording content in the formats of FMREC001.WAV...


You will find saved FM recording in Record folder under FOLDER menu.

- Tuner region

The player is defaulted to command band, if you are in Japan, you need to change to Japan Band.If you are in Europe, you need to set to European band.

## FOLDER

At any interface, long press ↵ to enter main menu and find folder UI.

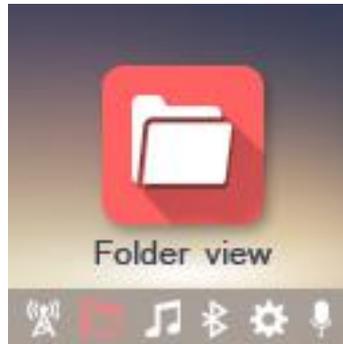

On folder view menu press ▶ to enter folder menu. Here you can check files you have stored on the device including music, recording and pictures. When you play music under “Folder”, it will shuffle songs by folder if you turn shuffle on.

## BLUETOOTH

At any interface, long press ↵ to enter main menu and find bluetooth UI.



If you have any question on this player, please contact with [support@agptek.com](mailto:support@agptek.com).