


Parts and controls

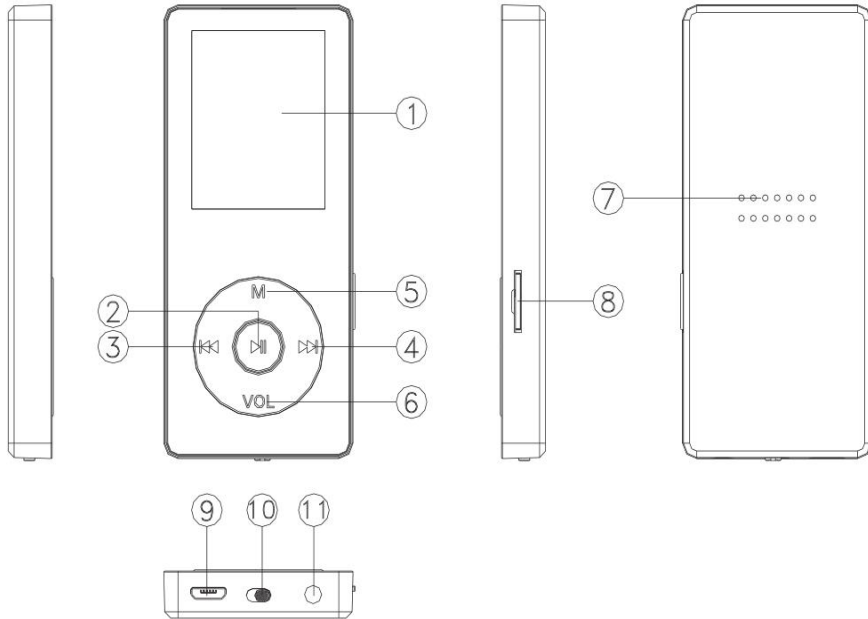

1. Display screen
2. “▶||” : Play/Pause/Select ion button
3. “◀◀” : Previous/Fast backward
4. “▶▶” : Next/Fast forward
5. “M” : Menu button/VOL+ button
6. “VOL” : Volume/Return button /VOL- button
7. Speaker hole
8. TF card slot
9. USB port
10. Power on/off button
11. Earphone port

Charge the Player

Use 5V/300mAh charger for charging.

Plug one end of the micro USB cable into the USB port of a computer, the other end to the port on your device. While it is fully charged, disconnect the cable from your device by pulling it straight outward.

Note: when you start charging, it will show two options: “Charge & Transfer” and “Charge & Play”. An icon in the top right corner will show the charging status.

Power On/Off

1. Power On: Slide the power switch to “On” position. If the switch already at “On” position, just press the play button “▶||” for 3 seconds.

2. Power Off:

1) Slide the power switch to “Off” position.

2) Press play button “▶||” for 3 seconds when the switch at “On” position.

Note:

- 1) Please put the power button to “Off” position if you won’t use it for a long time.
- 2) The player will power off automatically if inactive and no applications operate on backstage for 1 min. And it will still work on backstage for 30 seconds under “screensaver” with backlight goes out . You can press any button to light up the screen within 1 minute..

Main interface

Each time you press the button “◀◀”/ “▶▶”, it will bring you to one of its 6 different functions, including **All songs**, **Artists**, **Albums**, **Playlists**, **Folder view**, and **Tools**.

All songs: all songs listed here

Artists: all songs are classified by artists

Albums: all songs are classified by albums

Playlists: all your favorite songs can be added here

Folder view: all folders can be found here

Tools: There are four functions: FM radio, E-book, Recordings, Set.

While it's on the main interface, press button “▶||” to enter.

Submenu

While it's on music playing interface, press the button “M” to access to the submenu.

Then a related list will show, including “Home”, “Shuffle”, “Repeat”, “Bookmarks”, “Play music from...”, “Equalizer”, “Variable Speed Playback”, “Sleep timer”, “Delete”, “Add to playlist” and “Remove from Playlist”.

1. Play mode

While playing, press button “M” > “Home” / “Shuffle” / “Repeat” / “Bookmarks” / “Play music from...” / “Equalizer” / “Variable Speed Playback” / “Sleep timer” / “Delete” / “Add to playlist” / “Remove from Playlist”. Select according to your need.

Under menu “Repeat”, you can set “Repeat Mode”(A-B repeat), “Repeat time” and “Repeat interval”.

2. Sound settings

While playing, press button “M” > “Equalizer” > “Rock” / “Funk” / “Hip hop” / “Jazz” / “Classical” / “Techno” / “Custom”.

Rewind/Forward/VOL

While it's on music playing interface

Hold the button “▶▶” to fast forward, short press to next music file; hold the button “◀◀” to rewind, short press to the previous song files. Tap the button “▶||” for playing/pause.

Hold the button “VOL” to adjust the volume, short press to get back.

FM radio

Insert the earphone, then select FM frequency from 87.5 to 108.0MHz.

While in the FM radio interface, press button “M” to enter the submenu: Start FM radio recording, Presets, Save to preset, Clear preset, Auto tune, Tuner region, FM recording.

E-book

Can read .txt format. While reading e-book, press button “M” to enter the submenu: Play setting(Auto scroll time), Delete ebook, Bookmark Select, Delete bookmark, Add book

mark, Page select.

Recordings

There are 5 options available for you: Start voice recording, Storage, Recordings library, Record format, Record settings.

Record format: MP3/WAV/ACT Rec

Record settings > “**VOR**(Voice Operated Recording)”

Settings

There are 10 different items for you to choose in this section, including: Play mode, Sound settings, Sleep timer, Display settings, Date and time, Language, Information, Format device, Factory settings, Create playlist.

***Note:** when you set “date and time”, use button “**M**” to switch to next one. For example, “Set time”, after you set the hour, press button “**M**” to switch to set minute.*

Help and Troubleshooting

- Can't turn the player on

Please check whether the battery has been run out, maybe you can connect the player with computer and try again after charging.

- Can't hear the sound

- Please check if the volume is set to zero

- Check that the headset is inserted correctly.

- Can't download file from computer

- Please confirm whether it's connected properly

- Please check whether the storage space of the internal memory is full

- Please check whether the USB cable is damaged

Specifications

Music formats	MP3, WMA, DRM WMA, OGG, APE(Normal/Fast), FLAC, WAV, AAC-LC, ACELP
Recording formats	MP3, WMA, ACT
Video formats	AMV

Screen	1.8" OLED screen
Size	94*38*9mm, net weight: 79.2g
Capacity	8 GB; support up to 32 GB micro SD card(SD card not included)
Case	Full zinc alloy case
Playing time	12 hours by earphone, 3.5 hours by loudspeaker
Charging time	1.5 hours
Standby time	520 days
Battery capacity	3.7V/260 mAh
Recording distance	10-15 meters
Lyric format	LRC
Color	Silver/Gray