


WELCOME

Thank you for purchasing the new IPX8 waterproof swimming MP3 headphone S11. In order to avoid damage due to incorrect use, please read these instructions through carefully before using the device. Please pay particular attention to the safety information. If you pass the device on to a third party, these instructions must also be handed over.

OVERVIEW

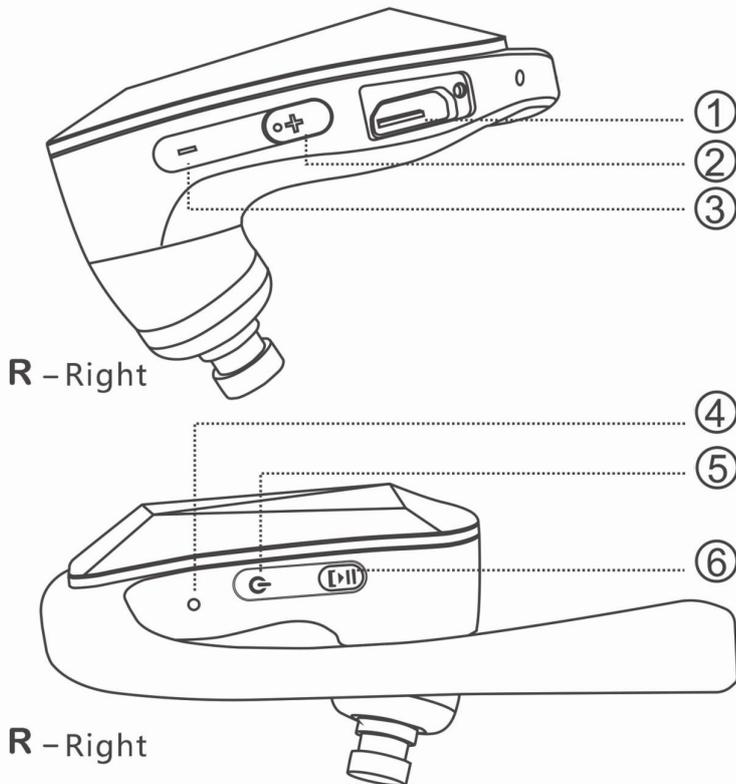

- | | | | |
|---|------------|---|---------------|
| ① | USB Port | ④ | LED Indicator |
| ② | "+"-Volume | ⑤ | Power |
| ③ | "-"-Volume | ⑥ | Play |

SWIMMING TIPS

1. Infiltrating water may block the earphone sections and reduce the speaker volume. To restore volume, please remove the ear buds and blow air into the headphone section to propel water out. Then squeeze the ear buds to drain the remaining water. Reinstall ear buds so that you can use the unit properly again.
2. Clean the remaining water inside the USB port after swimming. Though the USB port has been processed with Nano waterproof and anti-dust protection, over time immersion may still damage the device. To prevent such situation, please open the USB port cover and dry the remaining water.

Notice:

1. This product applies to IPX8 waterproof standards. This product is suitable for working faultlessly under continual submersion for 60 minutes at a depth of 1m. Testing environment are limited to fresh water, tap water, sweat and swimming pool water; liquid types other than above are not applicable to test results.
2. Total playing hours may vary depending on the way people use this product and at the volume they use it at.

WHAT'S IN THE BOX

ITEMS	DETAILS
IPX8 Waterproof MP3 Headphone	1X
Micro USB Cable	1X
Swimming Ear Tips	S,M,L
Normal Ear Tips	S,M,L
Headphone Bag	1X
User manual	1X

HOW TO CHARGE

1. The battery is low when the LED indicator shows a blinking red light every 10 seconds, please charge it. Otherwise, it will automatically power off.
2. For charging, please connect the unit to a reliable power source with the Micro USB cable included in the package.
3. The standard charging time is 1.5 hours. When charging, the LED indicator will show a solid red light, When charging finished, red light off.

Notice:

Please keep your USB port dry and clean. Please do not charge your device right after exercising in prevention of electricity leakage caused by remaining water or sweat.

HOW TO UPDATE MUSIC FILE

1. Please keep headset and computer connected by USB cable. Once the red LED solid and the removable disk be found on your computer, then you can update or replace the audio file freely.

Notice:

When the headphone is connected to the computer, the headphone will stop exit from current mode and enter U-disk mode or charging mode.

HOW TO SWITCH EQ MODE AND PLAYBACK MODE

1. When playing music, just press POWER button once to switch between NORMAL / ROCK / POP / CLASSIC mode successively.

Notice: The default is "NORMAL" mode after each reboot.

2. Press the PLAY button for 2 seconds to switch the music mode between SEQUENCE / SHUFFLE / SINGLE REPEAT. A music pause will be heard to indicate the playback mode switch successfully.

Notice: The default is "SEQUENCE" mode after each reboot.

LED INDICATION

COLOR	STATUS	INDICATE
Red	Blinking every 10 seconds	Low power, please charge
Red	Solid	Charging/USB connected
Red	Off	Charging complete
Blue	Solid	MP3 paused
Blue	Blinks for 7 times then power off	No compatible audio file can be identified in TF card
Blue	Blinks every 10 seconds	MP3 playing
Blue	Blinks 3 times quickly	Maximum volume

OPERATION

BASIC OPERATION		
Function	Operation	Signal/Prompt
Turn on	Press the power button for 2 seconds	4 seconds solid red LED and audio prompt
Turn off	Press the power button for 3-4 seconds	4 seconds solid red LED and audio prompt
Play/Pause	Press the play button once	Blue LED every 10s/Solid Blue LED
Volume Control	Press the "+"/"-" button	Audio pause/Blue LED flashing 3 times(at max)
Previous/Next	Press the "+"/"-" button for 2 seconds	N/A

Notice:

1. If no compatible audio file can be identified in TF card, the headset will auto power-off after the blue LED blink for 7 times continuously.
2. The volume and break-point will be automatically saved when powering off.
3. The headphone will automatically power off when paused after 10 seconds.

TROUBLE SHOOTING

Problem	Possible Cause	Solution
Can't turn on	Low battery	Charge
Can't play music file	No compatible audio file can be found in TF card	Use MP3 or WMA format file
Auto power-off	1.Low battery 2.MP3 standby more than 10 minutes	Charge

SPECIFICATIONS

- Speaker Rated Power: 5 m W * 2
- USB type: USB 2.0
- Support: MP3 , WMA
- Music Time: 9H
- Memory Capacity: 8GB
- IP Rating: IPX8
- Battery: 3.7V/220mAh

STORAGE AND MAINTENANCE

1. Storage:

Store your product in cool and dry place.

2. Maintenance:

- a. The recommended working temperature range is 0-45 °C (32-113 °F); over hot/cold/humid environment may badly

reduce the product battery life and harm the overall performance.

b. Avoid using the product during a lightning storm.

c. Please charge your unit first before using the device after a long time storage.

d. Clean the product with a piece of dry cloth.

e. If remaining water/sweat is found inside the USB port, simply dry it with a soft cloth.

f. Keep the product away from sharp edges/points.